



As you can see, when the trigger is set too high it causes too much tension and the trip pan won't drop, even with weight on it (the book).

We recommend setting the trigger as lightly as possible so that the two rods barely touch each other. If the rods are too slick, use sandpaper or an emery board to rough them up and they will hold by friction.

